

Preparation:

- Using the appropriate table from the Brass Fitting Section of the current Dixon Price List, select the proper ferrule and die.

Notes:

- 1. The Inside Diameter (I.D.) of the correct ferrule should be between 0.010" and 0.031" larger than the Outside Diameter (O.D.) of the hose.
- 2. Using ribbed dies or plain dies is a matter of preference. Similar size dies are interchangeable.
- 3. When using ribbed dies with some ferrules, one "rib" may crimp on the end of the ferrule resulting in an unacceptable appearance. If this happens, insert all die segments with numbers facing in.
- 4. DO NOT use the machine without the cover plate in place.
- 5. If the wing nuts are too tight, the die holders may bind.

Process:

For 5111A Machines:

- 1. Remove the two wing nuts and the cover plate on the machine.
- 2. Insert the dies into the die holders with segment numbers facing out.
- 3. Replace cover plate and install wing nuts.

For 1765A machines:

- 1. Remove the two wing nuts and the cover plate on the machine.
- 2. Insert the dies into the die holders with numbers on all die segments facing out.
- 3. Replace cover plate and install wing nuts.
- 4. Loosen the thumbscrew on the stop and swing the stop down.
- 5. Ensure the machine is in the retracted (fully open) position.
- 6. Disconnect air supply.
- 7. Slide the hose with stem and ferrule through the die opening.
- 8. For "BFM" and "BFW" style ferrules, align the end of the ferrule closest to the hose with the face of the dies.
- 9. For BF850, BFMW1050 and "BFL" style ferrules align the end of the ferrule closest to the hex on the stem with the face of the dies.
- 10. Swing the stop up and position it so that it contacts the end of the stem. Retighten the thumbscrew.
- 11. Reconnect air supply and crimp ferrule.
- 12. If necessary, adjust stop to position crimp in desired location on ferrule.