



51960

Screw-action type

For installing band and buckle type clamps



Operating Instructions for the 51960 Installation Tool


1

Hold the tool in the left hand so that the cutter bail is on the bottom and the pulling dog lever is on top. Slide the strap tail through the slot on the right side of the tool.



2

Press down on pulling-dog lever and rotate handle to begin tightening. Tighten strap to desired tension. Simultaneously relieve some tension while pushing the tool away as far as possible.

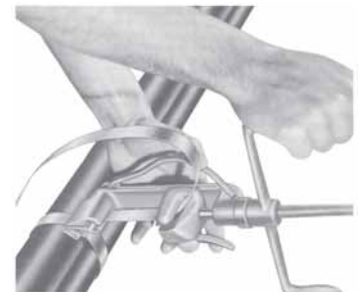

3

Pull the cutter bail to cut the strap tail. Tap the buckle ears down to hold the cut strap tail in place.



Operating Instructions for the 51960 with 51970 Roll-Over Attachment

- 1) Slide the 51970 Roll - over attachment on to the head of the 51960 Screw - action tool.
- 2) With handle of 51970 facing installer, place 51960 in a vise and tighten.
- 3) Slide the clamp tail through the slot on the 51970.
- 4) Press down on pulling-dog lever and rotate handle to begin tightening.
- 5) Tighten clamp to desired tension.
- 6) Simultaneously relieve some tension while rolling hose towards cutter.
- 7) When clamp buckle engages cutter, pull handle.



Dixon Valve & Coupling Co.
800 High Street
Chestertown, MD 21620
877.963.4966
Fax: 800.283.4966
www.dixonvalve.com