



F40

# Ratchet style tool


For applying 3/8" and 5/8" width band clamps



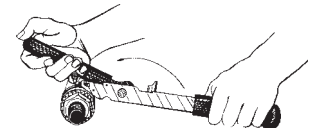
## Operating Instructions for the F40 Installation Tool

**1**

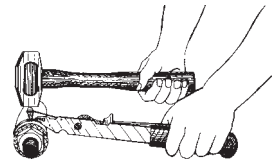
Push end of clamp into slotted end of clamp tool. Rotate ratchet wrench to engage clamp end in slot in winder.

**2**

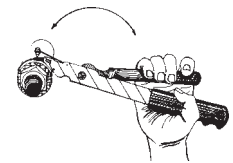
Push ratchet wrench forward with sufficient strokes until desired tension is obtained.

**3**

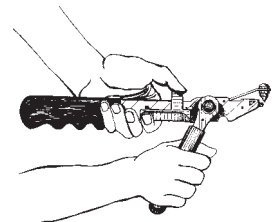
Grip ratchet wrench and tool together. Push punch down on lock and strike firm blow with hammer, thus locking the clamp tension.

**4**

Raise punch and while holding wrench and tool together, rotate tool forward and up against edge of the lock, breaking off tail piece.

**5**

To remove tail piece, rotate wrench until tail is free from slot in tool. With thumb, slide lever and remove winder and wrench from tool.

**6**

For application of 3/8" wide clamps, swing 3/8" adapter to forward position and follow steps 1 through 5.



## Part Identification for the F40 Installation Tool

*For applying 3/8" and 5/8" band clamps*

Qty Per Tool	Part Description	Part #
1	Frame	F-240
1	Punch and holder	FCA-289
1	Winder	FF-290
2	Retaining ring	F-292
1	Ratchet wrench	FA-298
1	Lever	E-293
1	3/8" clamp adapter	FC-229
1	Spring	641104F1
1	Ball	E-295

*Illustrations are not in correct proportion to one another.*



F-240



FCA-289



FF-290



F-292



FA-298



E-293



FC-229



641104



E-295



**Dixon Valve & Coupling Co.**

800 High Street  
Chestertown, MD 21620

877.963.4966

Fax: 800.283.4966

[www.dixonvalve.com](http://www.dixonvalve.com)